



Manufacturer: Hendi B.V., Steenoven 21, 3911 TX Rhenen, The Netherlands

Item / Article / Item / Artykuł / Article / Articolo / Articol / пункт / Στοιχείο / Číslo artiklu / Číslo artikla / Tétel / Stavka

Quan

PIN: 0063CU3074

Country / Land / Land / Kraj / Payes / Paese / țară / страна / Χώρα / Země / Krajina / Ország / Država

NL/DE/AT/PL/CH

BE/FR/LU/GB/IE/GR/IT/PL

RO/IT/HU

Burner / Brander / Brenner / Palnik / Brûleur / Bruciatore / Arzător / горелка / Καυστήρας / Hořák / Horák / égő / Gorilnik



Power / Belasting / Leistung / Мощность / Pui-sance / Potenza / Putere / Мощность / Ισχύς / Výkon / Áramellátás /Snaga

10kW 6.5kW 16kW

8.5kW 5.5kW 14kW

7.5kW 5.0kW 12.5kW

8.5kW 5.5kW 14kW

Category / Categorie / Kategorie / Kategoria / Categorie / Categoria / Categorie / категория / Κατηγορία / Kategorie / Kategória / Kategorija

I3P

I3P

I3P

I3B/P

Consumption / Verbrauch / Verbruik / Zużycie / Consommation / Consumo / Consum / потребление / Κατανάλωση / Spotřeba / Spotřeba / Fogyasztás / Potrošnja

676g/h 444g/h 1103g/h

585g/h 385g/h 965g/h

526g/h 349g/h 874g/h

444g/h 676g/h 1103g/h

Set up / Auflegung / Inrichting / Przeznaczony na / Conçu pour / Configurare / Configurarea / Настройка / Ρύθμιση / Hodnota regulátoru tlaku / Hodnota regulátora tlaku / Beüzemelés / Postavljanje

G31-50mbar

G31-37mbar

G31-30mbar

G31-37mbar

Country / Land / Land / Kraj / Payes / Paese / țară / страна / Χώρα / Země / Krajina / Ország / Država

CZ/SK

AT/CH/HR

Burner / Brander / Brenner / Palnik / Brûleur / Bruciatore / Arzător / горелка / Καυστήρας / Hořák / Horák / égő / Gorilnik



Power / Belasting / Leistung / Мощность / Pui-sance / Potenza / Putere / Мощность / Ισχύς / Výkon / Áramellátás /Snaga

8.5kW 5.5kW 14kW

11.5kW 7.5kW 18.5kW

9.5kW 6.5kW 16kW

Category / Categorie / Kategorie / Kategoria / Categorie / Categoria / Categorie / категория / Κατηγορία / Kategorie / Kategória / Kategorija

I3+

I3B/P

I3B/P

Consumption / Verbrauch / Verbruik / Zużycie / Consommation / Consumo / Consum / потребление / Κατανάλωση / Spotřeba / Spotřeba / Fogyasztás / Potrošnja

598g/h 402g/h 1010g/h

801g/h 519g/h 1300g/h

679g/h 455g/h 1129g/h

Set up / Auflegung / Inrichting / Przeznaczony na / Conçu pour / Configurare / Configurarea / Настройка / Ρύθμιση / Hodnota regulátoru tlaku / Hodnota regulátora tlaku / Beüzemelés / Postavljanje

G30/28-30,
G31/37 mbar

G30-50mbar

G30-37mbar



Year of production: 2019

KIWA No.: 0063

Use outdoors only. Read the instructions before using the appliance.
WARNING: accessible parts may be very hot.
Keep young children away.

Passion for food, premium design and the love for spending time outdoors with family and friends is what brought Quan alive. Now we would like to invite you to enjoy it too.

Thank you for purchasing Quan Garden Art fireplace. Please read these user instructions carefully before connecting the appliance in order to prevent damage due to incorrect use. Read the safety instructions in particular very carefully.

Safety regulations:

- Only use this appliance outdoors. You should not install or use it indoors.
- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose it was intended and designed for. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
- Never try to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired by a certified repair company.
- Do not try to repair the appliance yourself. This could give rise to life-threatening situations.
- Always keep an eye on the appliance when in use.
- Children do not understand that incorrect use of appliances can be dangerous. Therefore, never let children use appliances without supervision.
- Do not use any extra devices that are not supplied along with the appliance.
- The use of the installation must comply with the applicable national and local regulations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is intended solely for preparing food.
- Note: the top plate is hot. Let it cool down before touching or removing it.
- We recommend to use only gas cylinders with a capacity of more than 10 kilo's.
- Change the gas cylinder in a well ventilated area, away from any inflammation sources.
- The cylinder must be stored outdoors or in a well ventilated area.
- Storage of this appliance indoors is permissible only if gas cylinder is disconnected and removed from the appliance.
- Do not move this appliance when in operation, or after it has been turned off before the temperature has cooled down.
- Do not obstruct the ventilation holes of the cylinder housing.
- The appliance must be installed and gas cylinder stored in accordance with local gas fitting regulations.
- Use only the type of gas specified by the manufacturer.
- Do not use this appliance until all connections have been leak tested.
- In the event of gas leakage, the appliance shall not be used or if alight, the gas supply shall be shut off and the appliance shall be investigated and rectified before it is used again.
- The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that control compartment, burners and circulating air passageways of the appliance be kept clean.

Safety regulations:

- Shut off and check heater immediately if any of the following conditions exist: a) the smell of gas in conjunction with extreme yellow tipping of the burner flames; b) the appliance does not reach a proper temperature. A temperature less than 5°C will cause restricted heat flow and the appliance will not work properly; c) the appliance starts making popping noises during use (a slight popping noise is normal when the appliance is extinguished).
- Children and adults should be warned of the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.
- Young children and pets should be carefully supervised when they are in the area of the appliance.
- Clothing or other flammable materials should not be hung from the appliance, or placed on or near the appliance.
- Do not place any items on or against this appliance as storage. Certain material or items when stored under or near this appliance will be subjected to radiant heat and could be seriously damaged.
- Do not use or store flammable materials near this appliance.
- Do not spray aerosols in the vicinity of this appliance while it is in operation.
- Always maintain at least 0.9m clearance from combustible materials.
- Always position the appliance on a firm level surface.
- The injector in this appliance is not removable and the injector is only assembled by manufacturer. This appliance is forbidden to convert from one gas pressure to another pressure.
- Do not connect the gas cylinder directly to the appliance without pressure regulator.
- Do not place any items on the grate above the decoration flame.


General instructions:

- Necessary changes may only be done by a qualified technician.
- Use only the supplied pressure regulator.
- This appliance is only suited for propane and butane gas.
- Check that there are no kinks in the gas hose.
- The length of the gas hose may not exceed 1,5 m.
- Do not move the gas appliance during use.
- Always close the tap on the gas cylinder if the appliance is no longer being used.
- The user must not change parts of the appliance that are sealed by the manufacturer.
- Install the appliance as level as possible.

WARNING: Some parts of the appliance can become hot. Keep children away from the appliance.

Connecting the gas cylinder:

- Attach the pressure regulator to the gas cylinder using the large brass nut.
- Always ensure that the rubber sealing washer is present in the nut. (NB. This rubber washer is not required for UK-type pressure regulators).
- Tighten the nut well. Note that the nut has a left-hand thread.
- Check the connections for leaks using a soap and water solution.

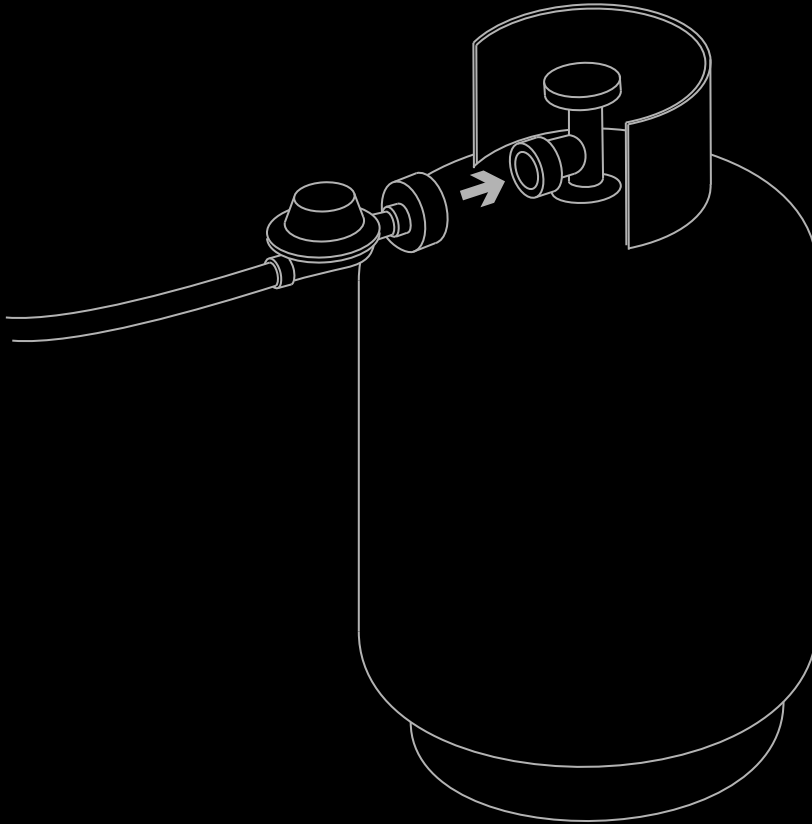


Igniting the gas burner:

- Open the tap on the gas cylinder.
- Turn the knob to the maximum (big flame) position. Keep the knob pressed and press the ignition button a few times until the burner is burning completely.
- Keep the knob pressed in for approximately a further 10 seconds. The burner will continue to burn.

Turning off the gas burner:

- Turn the knob completely to the right (standby) position.
- Wait for the fire to go off.
- Close the tap on the gas cylinder.
- Remember that the top plate will stay hot for up to 60 minutes after use.

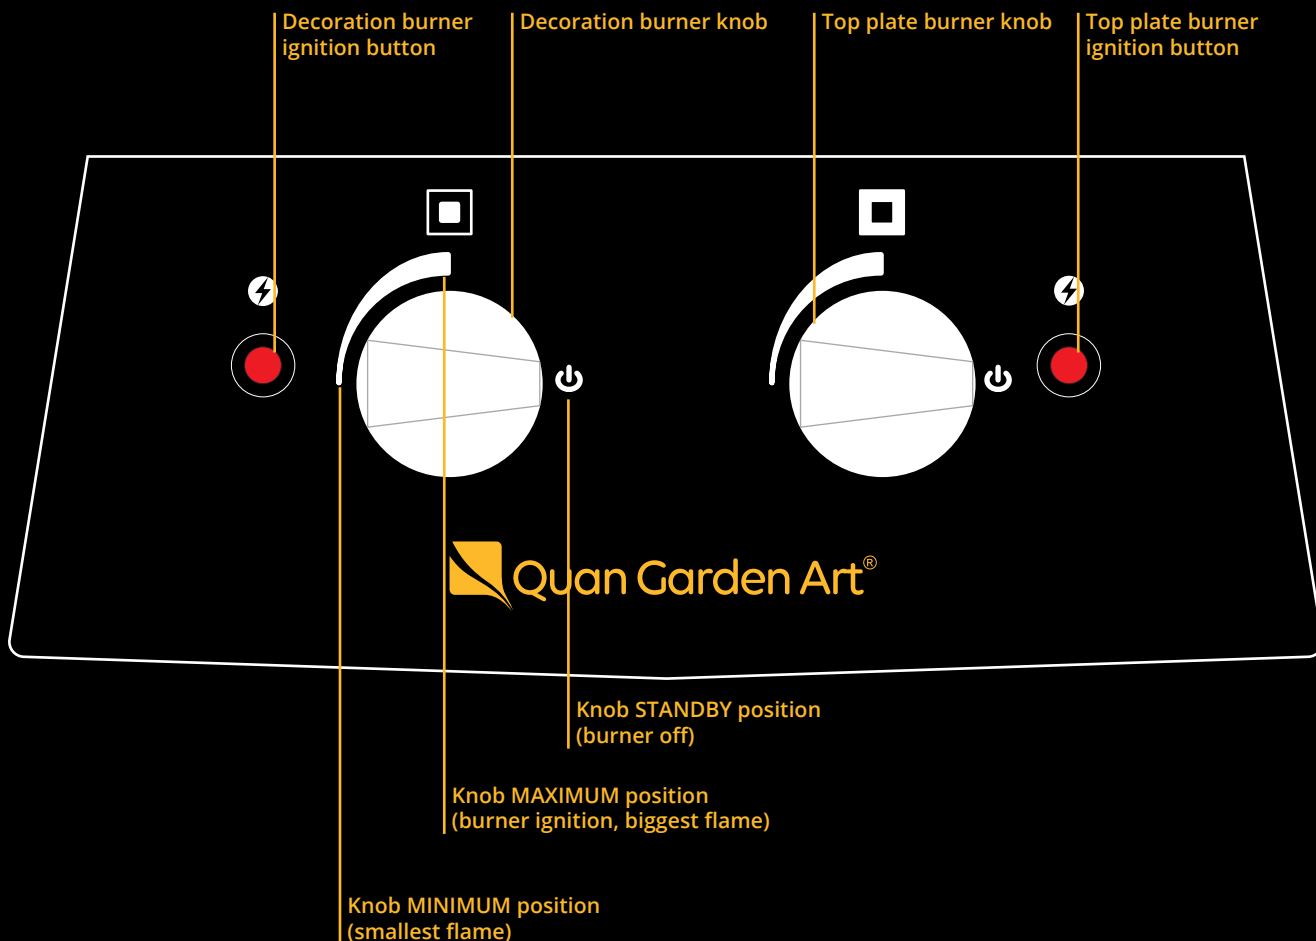

Note! After turning off the burners, wait approximately 10 minutes before reigniting the burners. After turning off the burners, always turn off the main tap on the gas cylinder and the tap on the appliance!

Cleaning and maintenance:

- Let the appliance cool down before cleaning.
- Beware: Never immerse the appliance in water or any other liquid!
- Clean the outside of the appliance with a damp cloth (water with mild detergent).
- The top plate of the grill should be cleaned regularly and after each use. Clean with water first, then with a spatula or wire brush. For harder dirt and fat use regular kitchen detergent.
- The top plate should be covered with consumable oil (vegetable or olive oil) after each use.
- Protect the top plate from rain water.
- Clean the ventilation slots with a vacuum cleaner.
- Keep inside after use.
- Let specialised personnel clean at least once a year the burner.
- Never use a high pressure cleaner.
- Maintenance after every use: Clean the top plate. Clean the grease duct and tray.

Note:

- It is to be recommended to replace the gas hose after 3 or 4 years (see date shown on hose). The gas hose becomes porous after a time. Also check the hose for leaks on a yearly basis at least. Even if the expiration date has not been expired yet, you must check the condition of the hose always. In case of damage/cracks you have to replace the hose immediately. Please make sure that you comply with all local health and safety regulations (e.g. fire code).
- Pressure regulators have a default maximum life span as indicated by the date printed on the regulator, but please note that local health and safety regulations may overrule this.
- Only replace the pressure regulator with one provided by the manufacturer.
- Consult the local regulations, these may differ.
- Always store gas bottles upright, in use as well as when empty.

Warranty:

- Any defect affecting the functionality of the appliance that becomes apparent within one year after purchase will be corrected by free repair or replacement provided the appliance has been used and maintained in accordance with the instructions and has not been abused or misused in any way. Your statutory rights are not affected. If the appliance is claimed under warranty, state where and when it was bought and include proof of purchase (f.e. receipt).
- In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

Discarding & Environment:

At the end of the life of the appliance, please dispose of the appliance according to the regulations and guidelines applicable at the time. Throw packing materials like plastic and boxes in the appropriate containers.